


SHORT OPERATING INSTRUCTIONS

FV 40.2 / FV 40. 2 G / FV 60.2

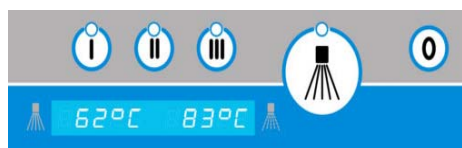

Control panel

1. Preparing to wash and rinse



- Open the door.
- Insert suction sieve and tank covering sieve.
- Close the door.
- Turn on the machine by pressing one of the pre-selector buttons.
- Check level and if necessary refill detergent and rinse aid reservoirs.
- The machine is ready for operation when flash light of pre-selector button stops.

2. Washing and rinsing



- Place the material to be washed in the basket.
- Insert the basket in the machine.
- Close the door.
- Program I for lightly soiled glasses or dishes.
- Program II for normal soiled glasses or dishes.
- Program III for heavily soiled glasses or dishes.
- Press the program start button.
- The machine automatically washes, rinses and switches itself off when the wash program is finished. Open the door after the lamp goes out and remove the basket.

3. Shutting the machine down



- Press the "0" button (Off button). The machine is switched off when all the lights are out.



- To empty the tank press the program start button.
- After the tank water has been pumped out, the interior is rinsed with fresh hot water. The door must be kept closed. The waste water pump disconnects itself automatically.
- Clean tank, strainers and wash arms.

4. Water softener



- A red lamp indicates when the salt container needs refilling. The salt container is situated in the tank of the machine. Use a funnel for filling. The seal and thread must be cleaned before re-tightening.